



Sliding Guard

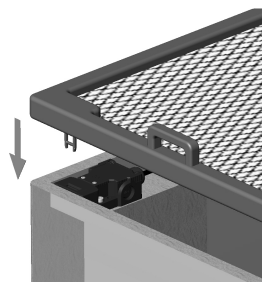

Lift off Guard

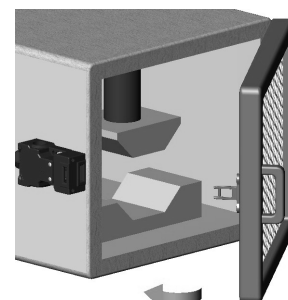

Hinged Guard

IMPORTANT NOTE:

Read and understand these instructions before installing, operating, or maintaining this equipment.

The product is designed to be a component of a customised safety orientated control system. It is the responsibility of the user to ensure the correct overall functionality of its systems and machines. IDEM, its subsidiaries and affiliates, are not in a position to guarantee all of the characteristics of a given system or product not designed by IDEM.

Application:

K-SS Tongue Interlock Switches are designed to be mounted for interlock position sensing of hinged moving guards.

They can be fitted to the leading edge of sliding, hinged or lift off guards.

They have positive opening contacts in accordance with IEC 60947-5-1 and the switch design offers a tamper resistant actuator key. They are available with actuator types to cover most fixing positions and contact blocks are available in slow make/break 2NC 1NO, 2NC 2NO, 3NC 1NO, or 4NC. Enclosures are protected to IP67 and IP69K.

Operation:

Operation of the switches is achieved by withdrawing the actuator key from the switch to cause deflection of the switch plunger.

Positive actuation of the contacts is achieved at 6mm withdrawal of the actuator.

Installation:

1. Installation of all IDEM interlock switches must be in accordance with a risk assessment for the individual application.

Installation must only be carried out by competent personnel and in accordance with these instructions.

2. M5 mounting bolts must be used to fix the switch and actuator, the tightening torque to ensure reliable fixing is 4.0 Nm.

Tightening torque for the lid screws, conduit entry plugs and cable glands must be 1.0 Nm to ensure IP seal.

Only use the correct size gland for the conduit entry and cable outside diameter.

Tightening torque for the connection terminal screws is 0.8 Nm, recommended conductor size is 1.5 – 2.5sq.mm.

3. Always fit a mechanical stop to the guard to prevent damage to the front of the switch.

The switch head position can be rotated by opening the lid and then pulling the end cover away from the switch and then rotating to the required position.

Set the actuator gap to 3mm when the guard is closed and against the stop. (See Fig. A.)

Use alignment guides to ensure that the actuator enters the switch without interfering with the sides of the aperture.

Always fit the aperture plug to the unused entry aperture to prevent foreign debris entering the switch mechanism.

4. After installation check operation of all control circuits ensuring that when the actuator is out of the switch the machine cannot be started.

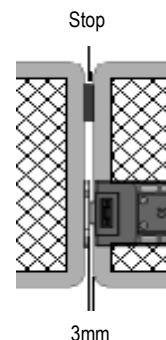



Fig. A

IMPORTANT

The Risk Assessment for the particular application should include the risk of spare actuators. Spare actuators should not be readily available and must be securely controlled.

Application consideration must be given to the fixing of the actuator which has to be in a way that prevents disassembly by easy means.

The safety functions and mechanics must be tested regularly. For applications where infrequent guard access is foreseeable, the system must have a manual function test to detect a possible accumulation of faults. At least once per month for PLe Cat3/4 or once per year for PLd Cat3 (ISO13849-1). Where possible it is recommended that the control system of the machine demands and monitors these tests, and stops or prevents the machine from starting if the test is not done. (See ISO14119).

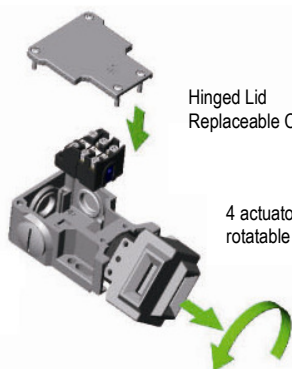

Hinged Lid
Replaceable Contact Blocks

All NC contacts are
positively operated at
withdrawal of actuator




4 actuator entry positions
rotatable head

Contact operation at withdrawal of actuator


2NC 1NO	6.8	6.0	0 mm	3NC 1NO	6.8	6.0	0 mm
11/12	Open			11/12	Open		
21/22	Open			21/22	Open		
33/34			Open	31/32	Open		
				43/44			Open

4NC	6.0	0 mm	2NC 2NO	6.8	6.0	0 mm
11/12	Open		11/12	Open		
21/22	Open		21/22	Open		
31/32	Open		33/34			Open
41/42	Open		43/44			Open

Quick Connect (QC) M23 12 Way Male (connector length 26mm) Pin view from Switch	Switch Circuit	Quick Connect (QC) M12 8 Way Male (on Flying Lead 250mm) Pin view from Switch
1 3	11 / 12	1 7
4 6	21 / 22	6 5
7 8	33/34 or 31/32	4 3
9 10	41/42 or 43/44	
12	Earth	8

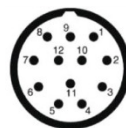

Quick Connect
Pin View from Switch

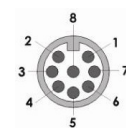

Every Month: Check the switch actuator and body for signs of mechanical damage and wear.
Replace any switch showing damage.

Every 6 Months: Check for mechanical damage to switch body or actuator.
Replace any switch showing damage.
Isolate power and remove cover. Check screw terminal tightness and check for signs of moisture ingress. Never attempt to repair any switch.

These requirements form part of the product warranty.



Safety Interlock Switch

Application Example: Door Interlocks - Dual Channel monitored

The switch contacts 11-12 and 21-22 from each switch are wired in series to an SCR-31-i Safety Relay to monitor for wiring short circuits. This provides Dual Channel monitoring and a check of the contactor feedback circuits through the auxiliary contacts (A) of K1 and K2.

The SCR-31-i monitors the switches and the contactors K1 and K2 and provides its own self-monitoring via force guided internal relays.

System is shown with machine stopped, guards closed and the contactors able to be energized. (E Stop switch is optional).

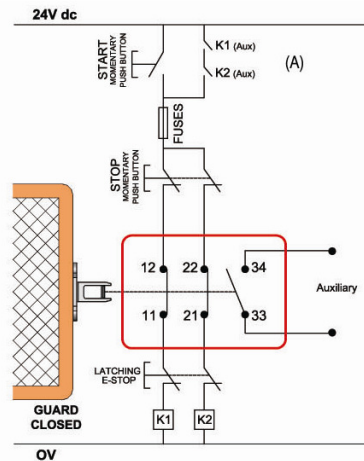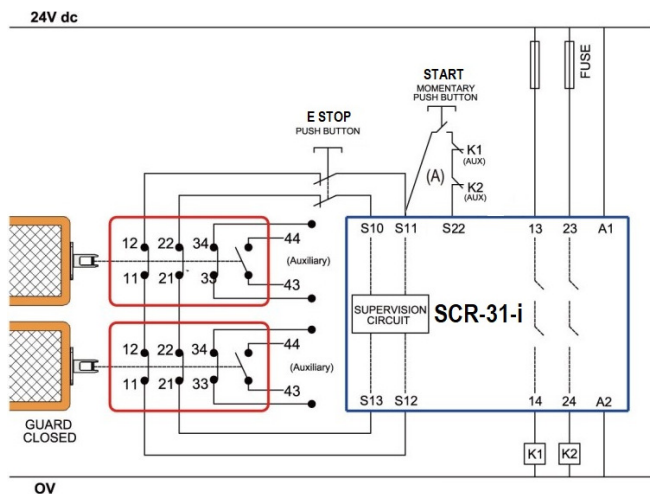

Application Example: Door Interlock - Dual Channel non-monitored

This system shows interlock switch circuits 11-12 and 21-22 configured to allow dual circuit direct feeds to contactor coils K1 and K2.

When the start button is pressed and then released, the auxiliary contacts (A) of contactors K1 and K2 maintain the feed to the contactor coils.

Opening of the Interlock switch or depressing the E Stop will isolate power to the contactor coils. Re-start can only occur providing the Guard is closed, the E Stop is reset.

System is shown with the guards closed and the machine able to start.

Standards: ISO14119, IEC60947-5-1, EN60204-1
ISO 13849-1, UL508


Safety Classification & Reliability Data:

Mechanical Reliability B10d
ISO 13849-1
EN62061
Safety Data – Annual Usage

2.5 x 10⁶ operations at 100mA load
Up to PLe depending upon system architecture
Up to SIL3 depending upon system architecture
8 cycles per hour/24 hours per day/365 days
MTTFd 356 years

Utilization Category
Overload protection fuse (fuse externally)
Thermal Current (Ith)
Rated Insulation/Withstand Voltages
Actuator Travel/Force for Positive Opening
Actuator Entry Minimum Radius
Maximum Approach Withdrawal Speed
Body Material
Enclosure Protection
Operating Temperature
Vibration
Conduit Entry
Fixing

AC15 A300 240V. 3A Pilot Duty
10A. (FF).
600VAC/2500VAC
6mm/12N
175mm Standard 100mm Flexible
600mm/s
Stainless Steel 316
IP67 IP69K
-25C +80C
IEC 68-2-6 10-55Hz+1Hz
Excursion: 0.35mm, 1 octave/min
Various (see sales part numbers)
2 x M4

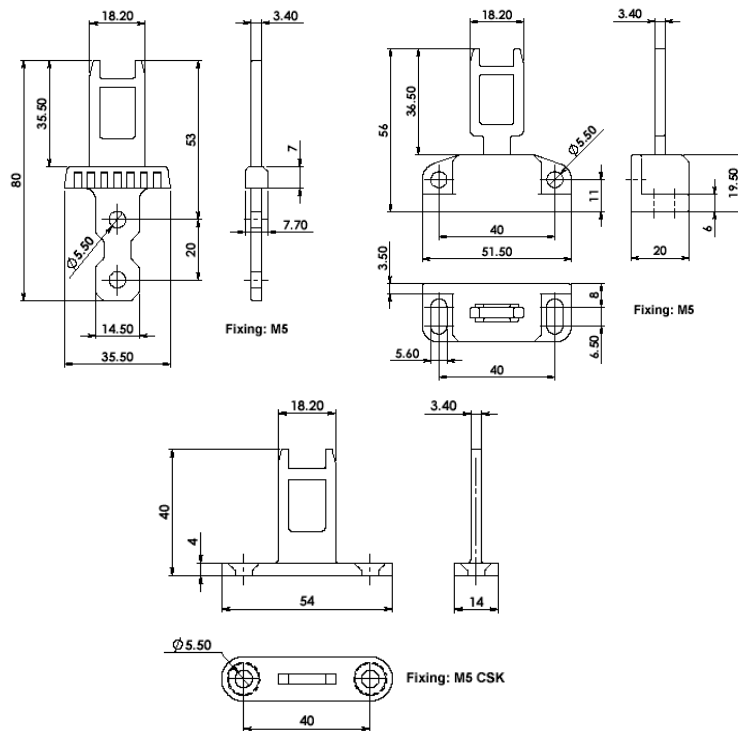

Original Instructions.

To request this data sheet in other languages please contact info@idemsafety.com
Um dieses Datenblatt in Deutscher Sprache wenden Sie sich bitte anfordern info@idemsafety.com
Pour obtenir cette fiche en Français, veuillez contacter info@idemsafety.com
Para solicitar esta hoja de datos en Español, por favor contacto con info@idemsafety.com



WARNING: DO NOT DEFEAT, TAMPER, OR BYPASS THE SAFETY FUNCTION.
FAILURE TO DO SO CAN RESULT IN DEATH OR SERIOUS INJURY.

AVERTISSEMENT: NE PAS DESACTIVER, MODIFIER, RETIRER, OU CONTOURNER
CETI INTERVERROUILLAGE IL PEUT EN RESULTER DES
BLESSURES GRAVES DU PERSONNEL UTILISATEUR.