


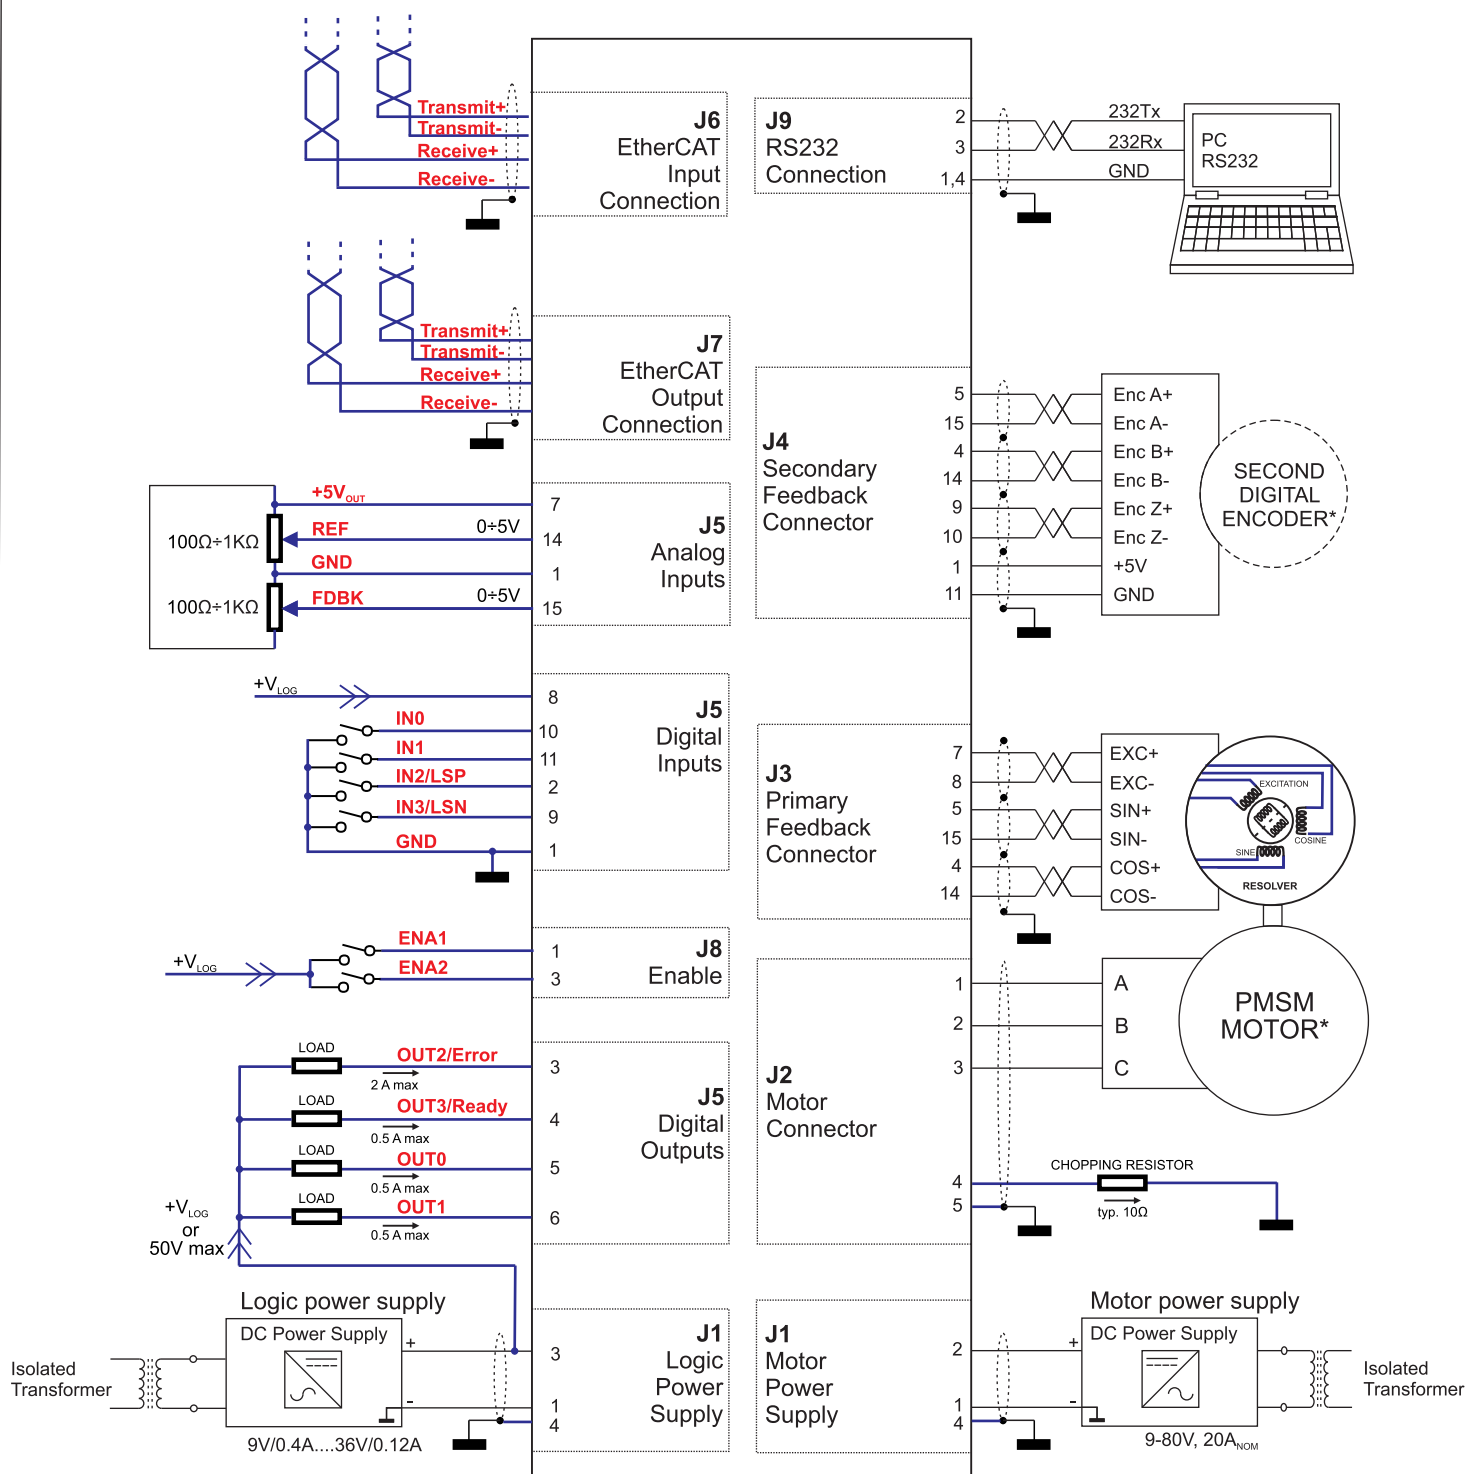

* ALL DIGITAL INPUTS CAN BE SET AS PNP/NPN INPUTS BY SOFTWARE

* FOR ALL AVAILABLE OPTIONS CHECK THE USER MANUAL OF THE DRIVE