


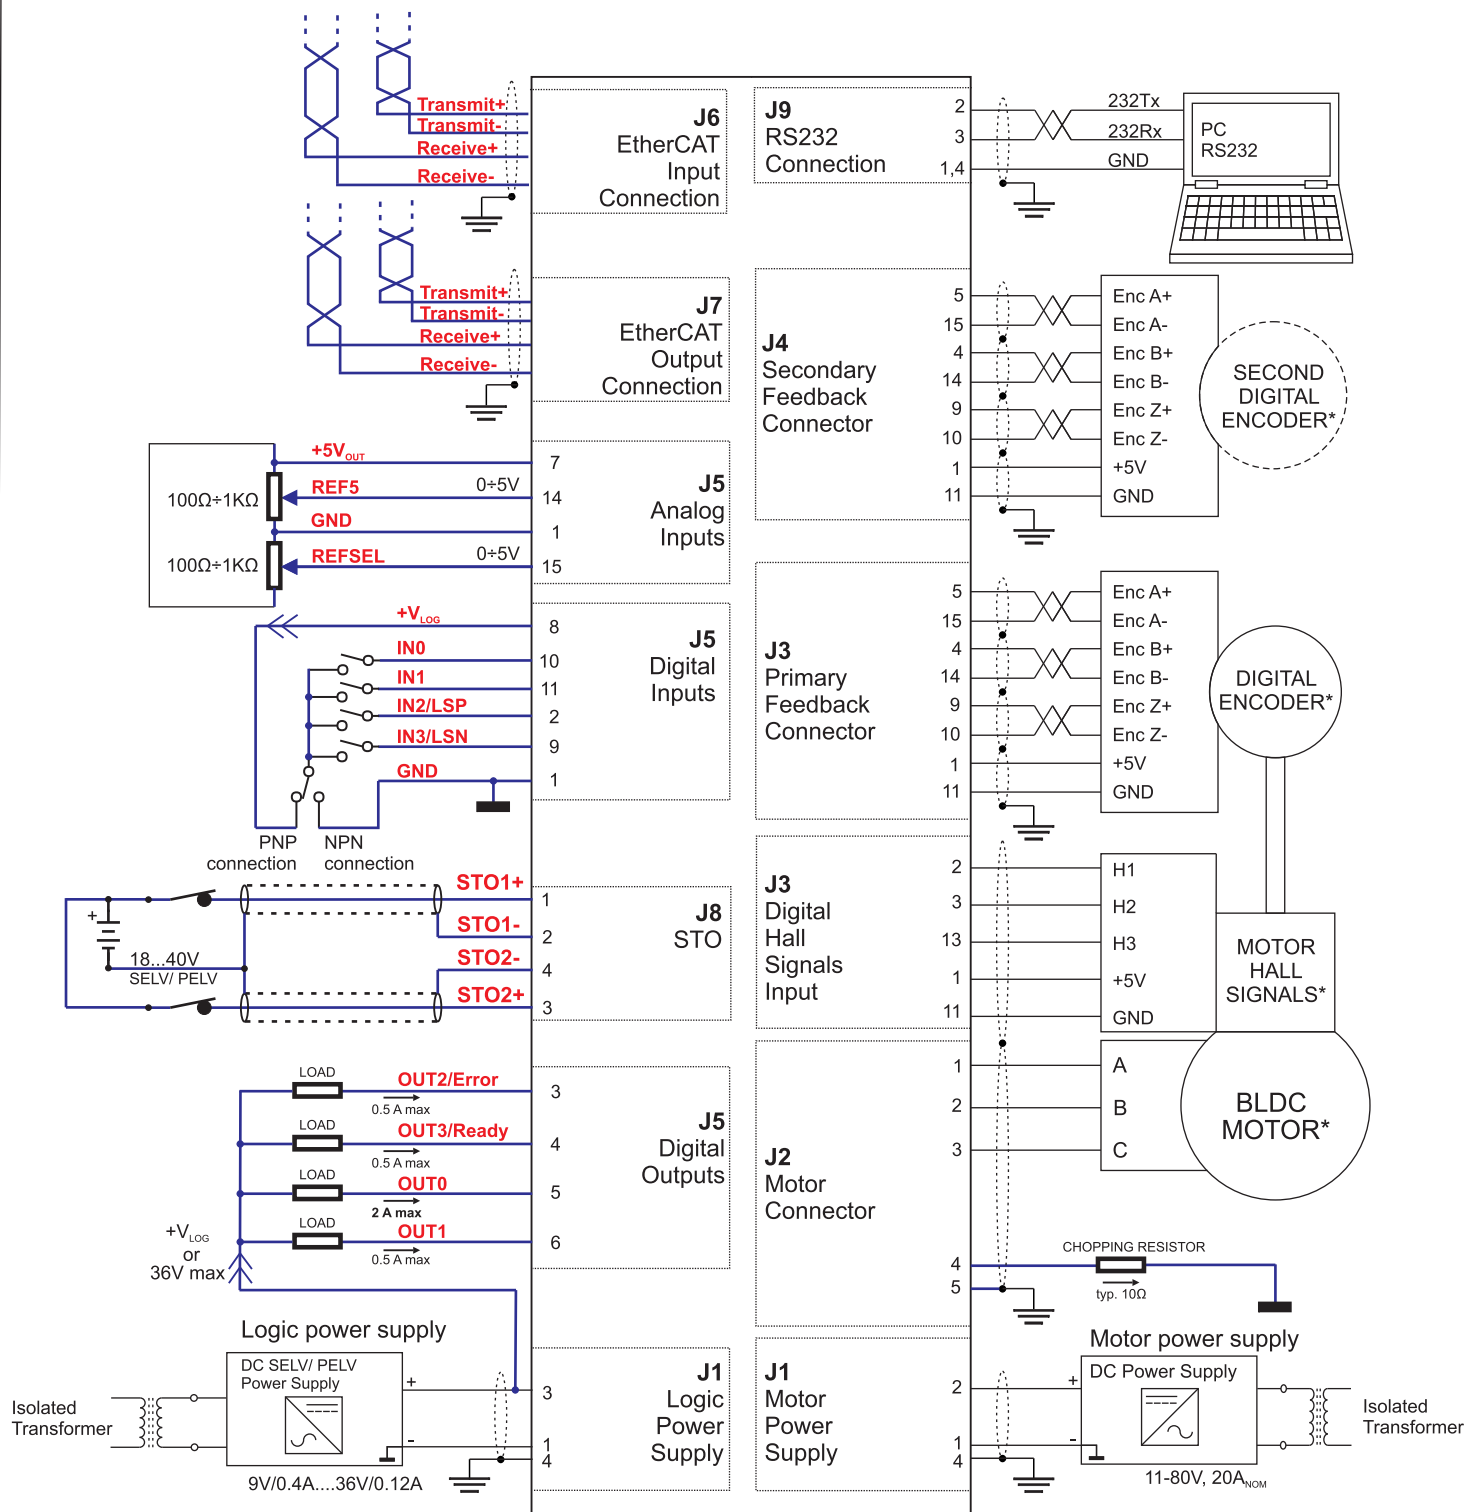

* THE DIGITAL INPUTS CAN BE CONFIGURED AS PNP/NPN TYPE IN SOFTWARE SETUP

* FOR ALL AVAILABLE OPTIONS CHECK THE USER MANUAL OF THE DRIVE